Installation instruction

Part No: NS1044.5

EAN-Code: 40 21188 00185 2

Navigation mount (cannot be installed in cars with KeyFree-Start function)

for **Ford Mondeo** ´07 …

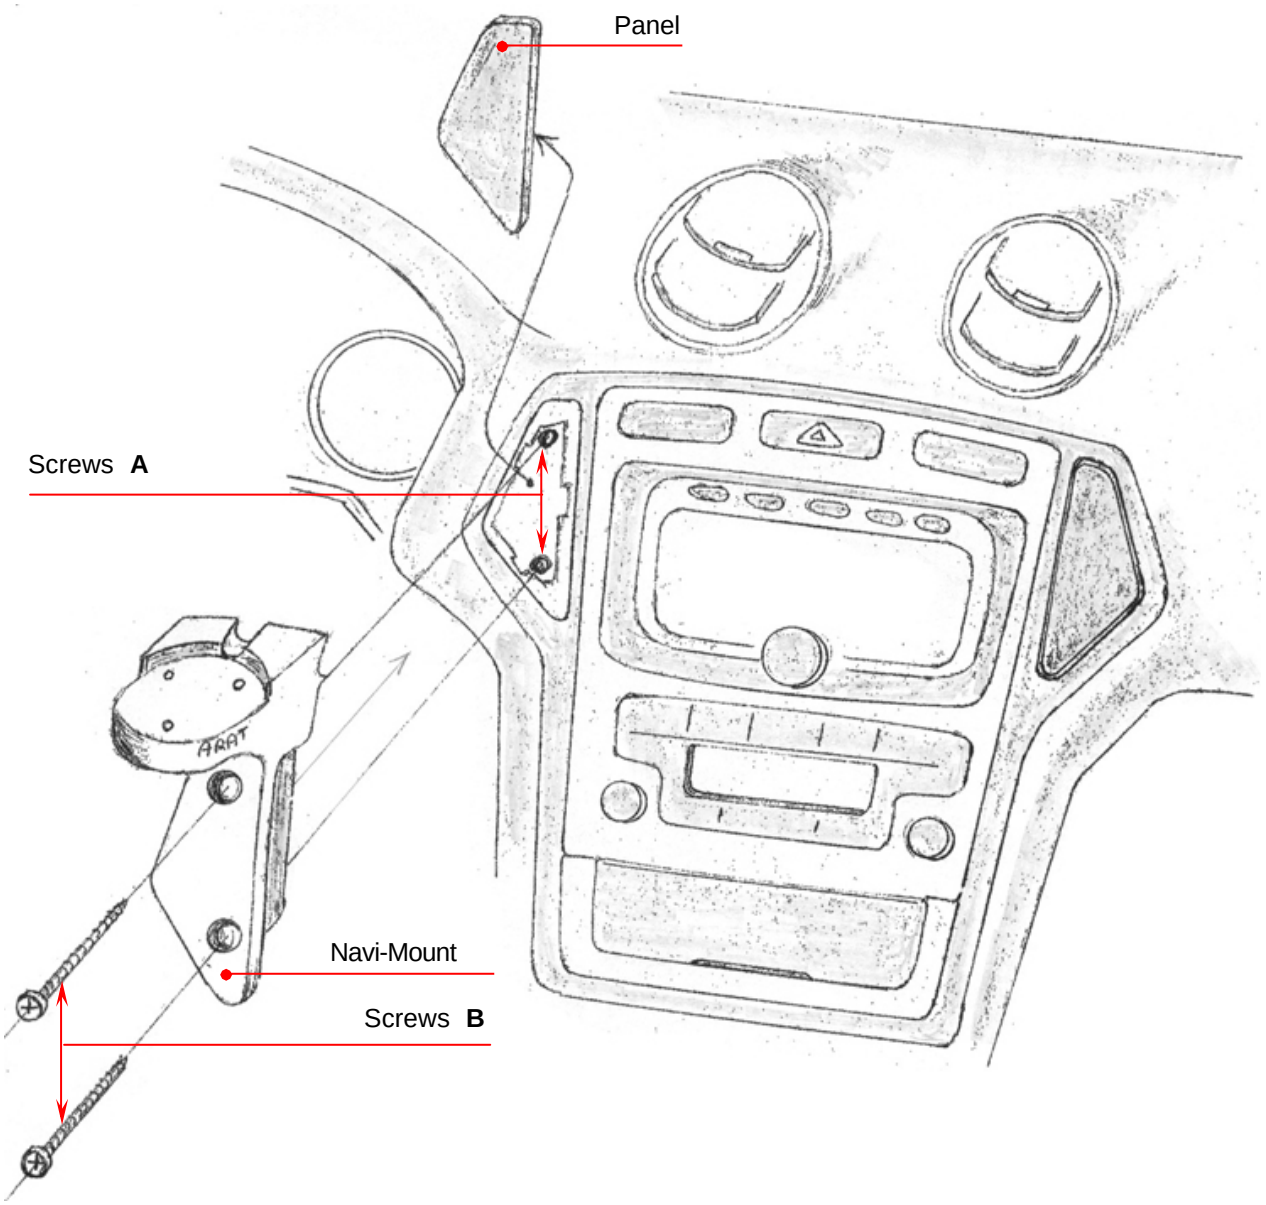

Installation instruction

- Remove the small panel with a suitable tool (plastic lever) from its housing
- Remove the screws (2) at **A**
- Place the ARAT mount to the contours where the panel has been removed
- Adjust the mount accordingly and secure the mount with the supplied screws B (2 x 4.8 x 45mm)

ARAT Germany - Hotline: 0180-5-895252 (14ct/min) - Fax: 05207-8952-68 - Email: info@arat.de - www.arat.de
ARAT Austria - Telefon: 0043-4732-37280 - Fax: 0043-4732-372804 - Email: info@arat.at - www.arat.de